 
 


ASSEMBLY INSTRUCTION

 
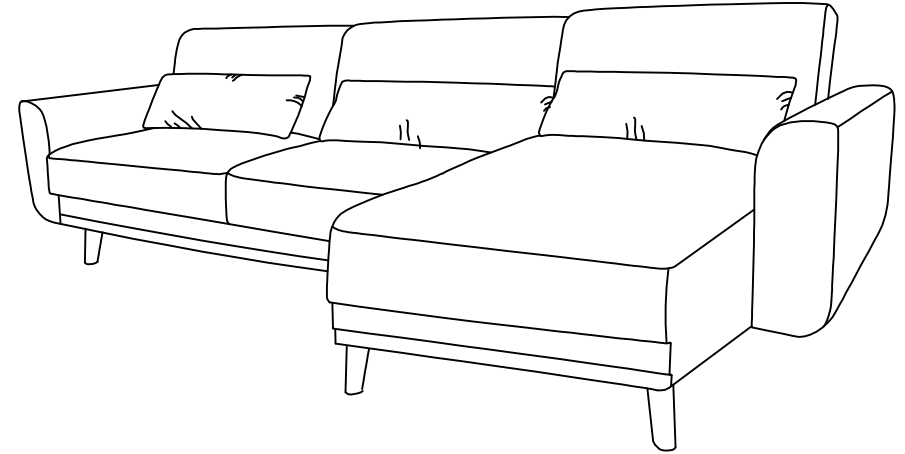 


ASSEMBLY INSTRUCTIONS

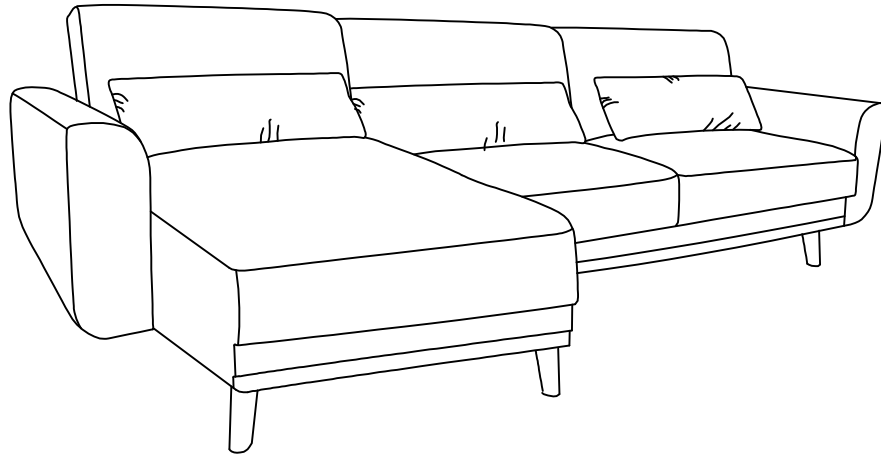


PARTS AND HARDWARE

Note: Individual parts are not shown to scale.

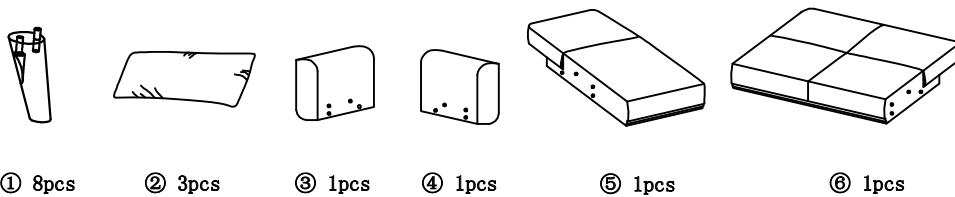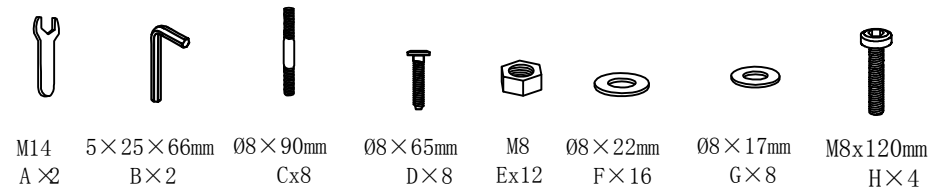

 Step 1

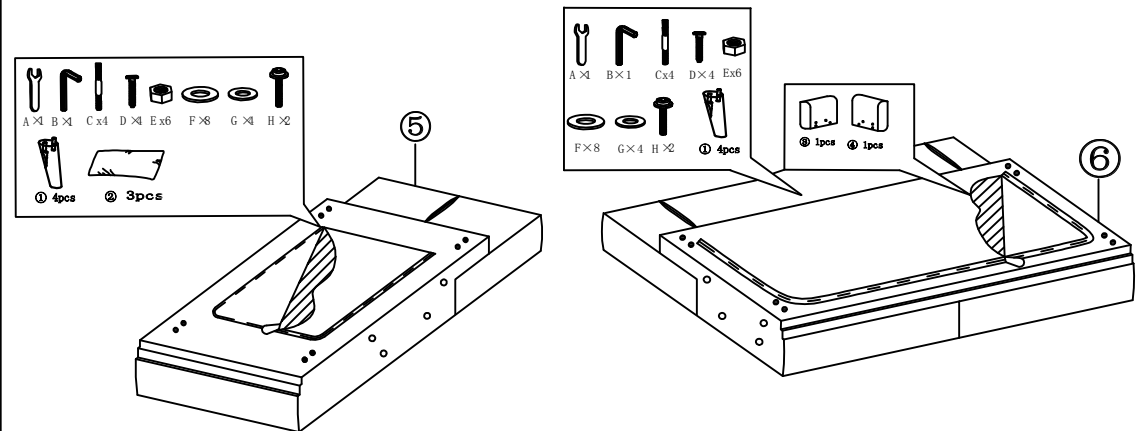

OPERATING YOUR UNIT

 
 
 
 
 
 
Step 2

Step 3

Step 4

Step 5

Step 6

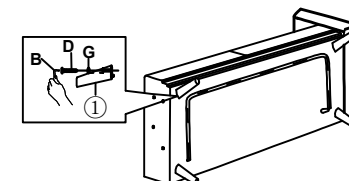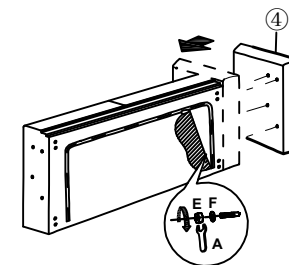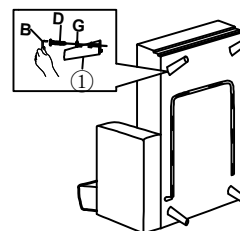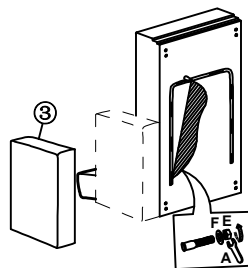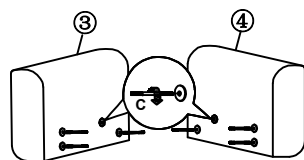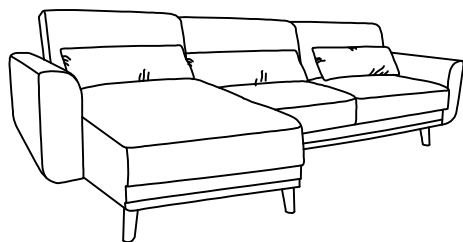







Step 2

Step 3

Step 4


Step 5

      Step 6

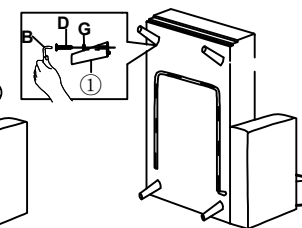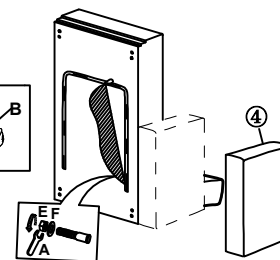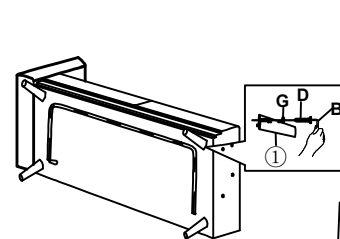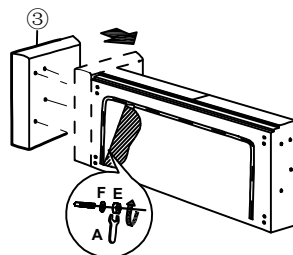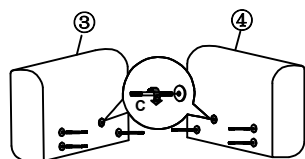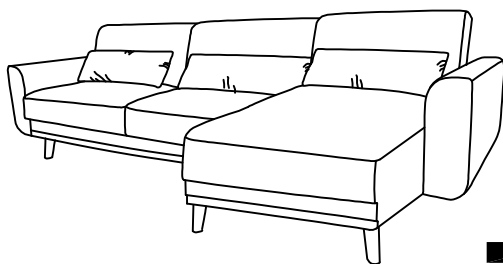


OPERATING YOUR UNIT

 
Step 7

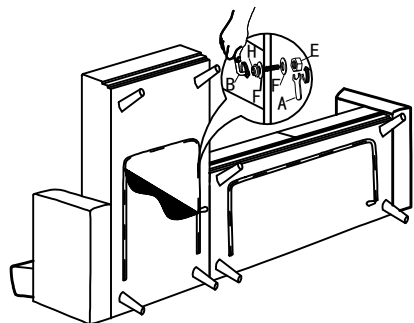

 
Step 8

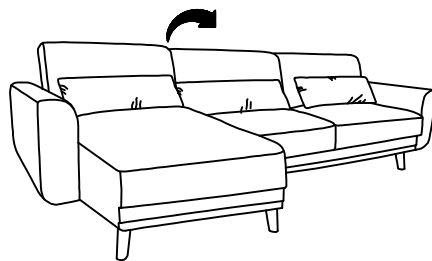

 
Step 9

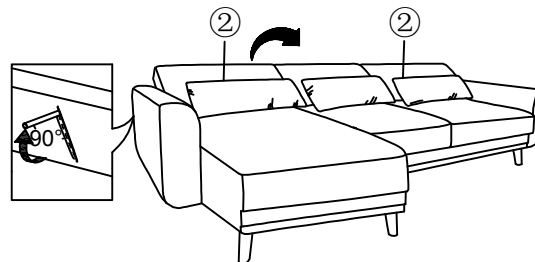

 
Step 10

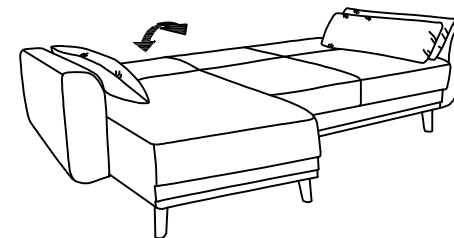

 
Step 7

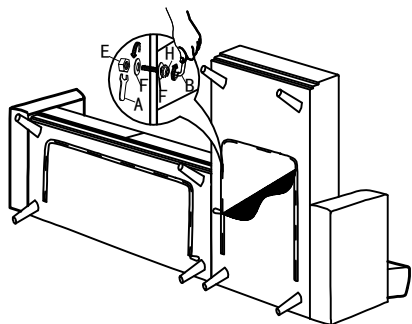

 Step 8

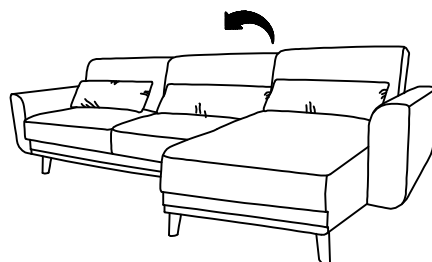

 Step 9

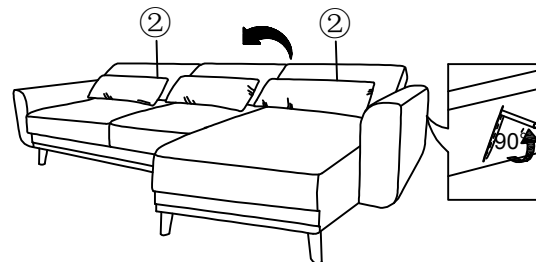

Step 10

